

- ▶ Vehicles with Manual transmission
- 1 Stop the vehicle completely and continue to depress the brake pedal.
- 2 Depress and hold the clutch pedal.
- 3 Push and turn the front-wheel drive control switch to “4H”.

The “4LO” indicator will go off and the “4HI” indicator come on.

■ **When the front-wheel drive control switch is shifted to “4L”**

VSC is automatically turned off.

■ **If the “4HI” indicator flashes**

The transfer mode may not successfully change. Drive straight ahead while accelerating or decelerating, or drive in reverse.

■ **If the “4HI” indicator is ON and the “4LO” indicator continues to flash**

Shift the shift lever to D or R (Vehicles with Automatic transmission) or 1st gear or Reverse (Vehicles with Manual transmission) and drive the vehicle slowly, then stop.

■ **If the “4HI” indicator continues to flash and the “4LO” indicator is ON**

Shift the shift lever to D or R (Vehicles with Automatic transmission) or 1st gear or Reverse (Vehicles with Manual transmission) and drive the vehicle slowly, then stop.

■ **If the “4HI” indicator is ON and the “4LO” indicator continues to flash and a buzzer sounds**

The shift lever is not in N (Vehicles with Automatic transmission) or the clutch pedal is not held in the depressed position (Vehicles with Manual transmission) and/or the vehicle is moving. Stop the vehicle

completely, shift the shift lever to N and make sure that the indicator stops flashing.

■ **If the “4HI” indicator continues to flash and the “4LO” indicator is ON and a buzzer sounds**

The shift lever is not in N and/or the vehicle is moving. Stop the vehicle completely, shift the shift lever to N (Vehicles with Automatic transmission) or the clutch pedal is not held in the depressed position (Vehicles with Manual transmission) and make sure that the indicator stops flashing

■ **If the “4HI” and “4LO” indicator flashes rapidly**

There may be a malfunction in the four-wheel drive system. Have the vehicle inspected by your Toyota dealer immediately.

■ **Shift between 4H and 4L at low temperature**

Immediately after starting the engine in a low-temperature environment, the shift between 4H and 4L may be prohibited because the transmission fluid is cold. At that time, a warning message will be displayed in the multi-information display, so follow the message and operate the front-wheel drive control switch again after warming up.

■ **Four-wheel drive usage frequency**

You should drive in four-wheel drive for at least 10 miles (16 km) each month. This will assure that the front drive components are lubricated.

 **WARNING**

■ **Shifting the front-wheel drive control switch from “2H” to “4H” while driving**

Never operate the front-wheel drive control switch if the wheels are slipping. Stop the slipping or spinning before shifting.